

# SRE-Repeater UP

Smart rule based repeater for airConfig tool

**thermokon**  
Sensortechnik GmbH

## Datasheet

Subject to technical alteration

Issue date: 7/21/2015



## Application

**AirConfig tool is mandatory for SRE Repeater UP!  
All settings must be programmed using airConfig.**

Wireless Repeater which receives telegrams and re-send's them to enhance and increase the signal distance from the transmitter to the receiver. Typically a repeater will be used when the sensor has been mounted too far from the receiver or there are obstacles between sensor and receiver which absorb the signal to the receiver.

It can operate as a Level-1 or Level-2 repeater and selected telegrams can be defined using the airConfig software to identify and select certain telegrams to be repeated. The parameters can be selected for sensor signals only or sensor signals and already repeated signals.

## Types Available

SRE-Repeater UP                      1-Level/2-Level (to be configured by airConfig tool) repeater with internal Antenna.

## Security Advice – Caution



The installation and assembly of electrical equipment should only be performed by authorized personnel.

The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

**CAUTION! Risk of electric shock due to live components within the enclosure, especially devices with mains voltage supply (usually between 90..265 V).**

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual



## Notes on Disposal

As a component of a large-scale fixed installation, Thermokon products are intended to be used permanently as part of a building or a structure at a pre-defined and dedicated location, hence the Waste Electrical and Electronic Act (WEEE) is not applicable. However, most the product may contain valuable materials that should be recycled and not disposed of as domestic waste. Please note the relevant regulations for local disposal.

## Information about EasySens® (radio) / airConfig general usage

Basic information about EasySens® radio and about general usage of our software airConfig you can find to be download using the link

[http://www.thermokon.de/ftp/info/Information\\_Radio\\_airConfig\\_en.pdf](http://www.thermokon.de/ftp/info/Information_Radio_airConfig_en.pdf)



## Configuration of SRE-Repeater with airConfig

### Level-1 or Level 2 Repeater

SRE-Repeater can be used as Level-1 or Level-2 repeater. Level-1 repeater, repeats only telegrams received from a sensor directly, where Level-2 repeater repeats telegrams received from a sensor or a Level-1 repeater. If a telegram will be received from a sensor and a Level repeater, only the signal received first will be repeated.

Level-1 and Level-2 Repeater repeat all telegrams received regardless of their need to be repeated. Therefore the number of telegrams in the air is doubled or tripled, because of a few sensors having range problems.

### Smart Level-1 respectively Smart Level-2 Repeater

To repeat selected telegrams instead of all telegrams, Smart-L1 or Smart-L2 must be selected.

The image displays two screenshots of the airConfig software interface. The left screenshot shows the 'Sensors' tab with 'Operation' set to 'Level 1'. The right screenshot shows the 'Filter' tab with 'Type' set to 'Signal Strength', 'Option' set to '-75 db', and 'Kind' set to 'APPLY'. A 'Filter table' is visible below, showing a list of sensor IDs with a hand cursor pointing to one of them.

This activates a 2nd tab which allows to define up to 10 parameters to identify the telegrams that are to be repeated.

There are 4 different types of parameters available from the drop down menu:

- **Sensor-ID** (EnOcean Radio ID of the sensor)
 

Drag and drop the desired sensor (with range problems) into the Filter of the smart repeater.
- **Signal strength** (RSSI-Level)
 

All telegrams received at a RSSI level lower than the specified threshold will be repeated.  
Higher RSSI telegrams identify weaker signals, i.e. -80dB is weaker than -60dB.

The receiver's technical limit is approx -90..95dB. Signals weaker than this can not be filtered from the ambient noise. To ensure a reliable transmission the signal must be 15..20 dB above the noise level – signals weaker than -75.-80db will not provide sufficient telegram information.
- **RORG** (Telegram-Type)
 

Standard EnOcean telegram types are RPS (Switches), 1BS (window contact, window handle), 4BS (4-Byte Sensors), MSC (manufacturer specific), VLD (Variable Length), UTE (Universal Teach-In).
- **Destination-ID** (EnOcean Radio ID)
 

Only for addressed telegrams (different to broadcasted telegrams). Sensor telegrams typically will be broadcast type telegrams. Addressed telegrams are included in the EnOcean standard, but rarely used. .

Each parameter can be applied or blocked. Blocking inverts the rule – a certain telegram or a certain type of telegram (RORG) would not be repeated.

In case of multiple conditions / the parameters can be AND or OR scenario


Select OR for all telegrams and parameters to be processed independently. When selecting AND the telegram will be repeated only if all conditions are met.

10 parameters / conditions can be selected in total.

## Technical Data

Radio technology	EnOcean, (IEC 14543-3-10)
Frequency	868 MHz
Power supply	100..240 V ~
Power consumption	max. 2 VA (100..240 V ~)
Antenna	internal
Enclosure	ABS, red
Protection	IP20 according to EN 60529
Connection electrical	terminal block max. 1,5mm <sup>2</sup>
Ambient temperature	-20..+60 °C, max 75% rH, non-condensing
Weight	55 g
Mounting	flush mounted with standard EU box (Ø=55 mm)
Notes	max.10 parameters/ conditions

## Connection Plan

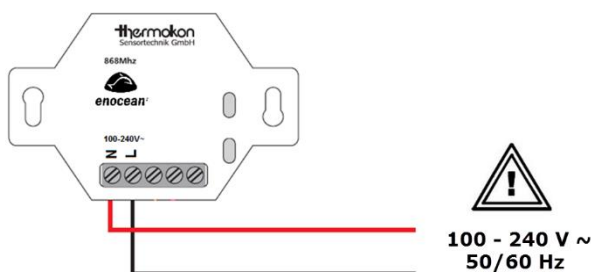

**Dimensions (mm)**

